
FW: Integrating the StabTip Spline with the 1/4" Square Leading Edge


1 message

Tandy Walker <rdb435021@icloud.com>
To: Trevor Boundy <jtboundy@dcsi.net.au>

3 February 2022 at 06:45

From: Tandy C. Walker [mailto:tandyw@flash.net]
Sent: Monday, January 16, 2006 11:27 AM
To: Walker, Tandy C. <tandyw@flash.net>
Subject: Integrating the StabTip Spline with the 1/4" Square Leading Edge

Here are a couple of shots showing how I integrate the curved stab tip spline with the straight 1/4" square diamond leading edge. The spline is cut off on the bias and the 1/4" square diamond leading edge is notched out along its diagonal as shown below. Notice the 1/8" block use to elevate the LE of the spline to align it with the leading edge center line.

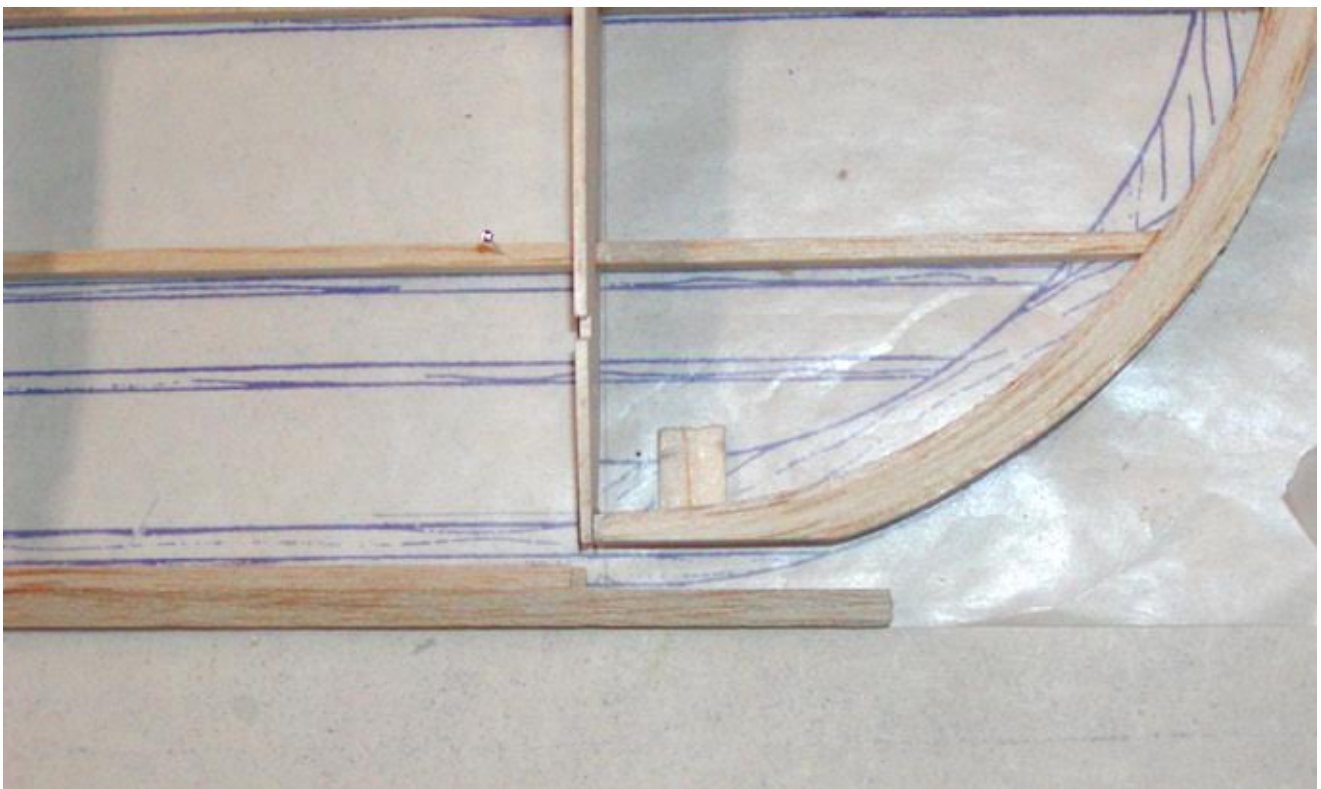

This picture shows the 1/4" square diamond LE fitted to the spline, but not yet glued in place.....Tandy

